
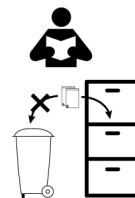
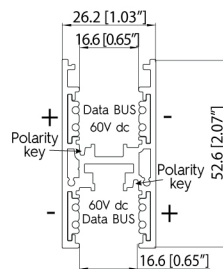


ST7-E ST9-E



MULTISYSTEM
evo

1 - 9500-.../...-ST7-E

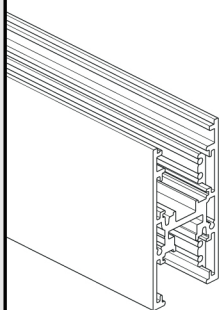

CODE	L mm [ft]	
9500-1/...-ST7-E	1000 [3.28']	
9500-2/...-ST7-E	2000 [3.28']	
9500-3/...-ST7-E	3000 [3.28']	

1 - 9500-.../...-ST9-E

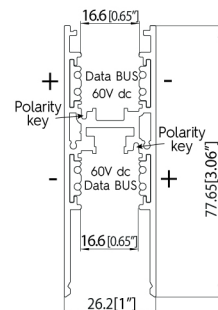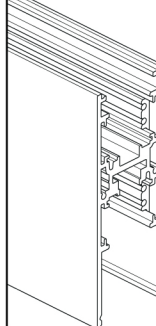



CODE	L mm [ft]	
9500-1/...-ST9-E	1000 [3.28']	
9500-2/...-ST9-E	2000 [3.28']	
9500-3/...-ST9-E	3000 [3.28']	

2 - USE


Suspended




3 - FIXING

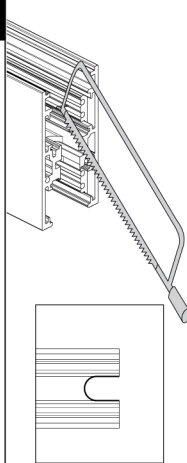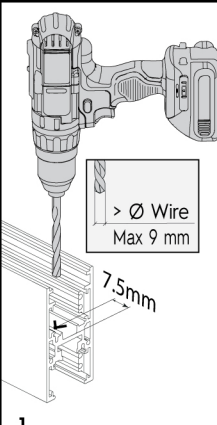


With clamps




2

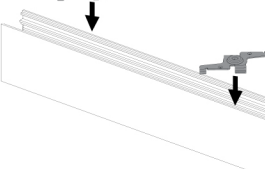


3



With brackets






2

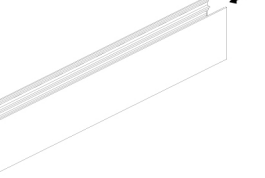


3


M max:
0,5 Nm

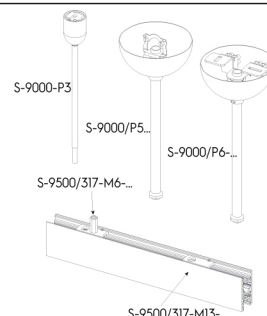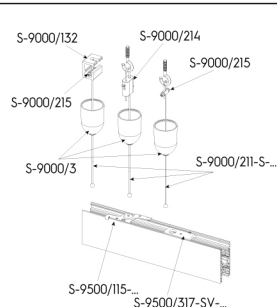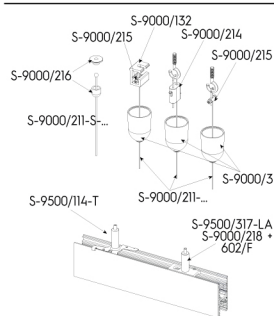

MAX LOAD

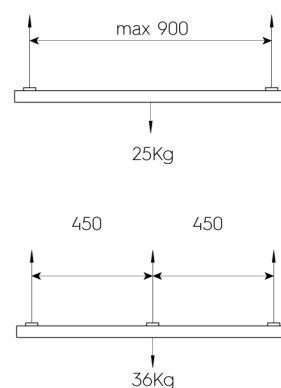

DISTRIBUTED LOAD

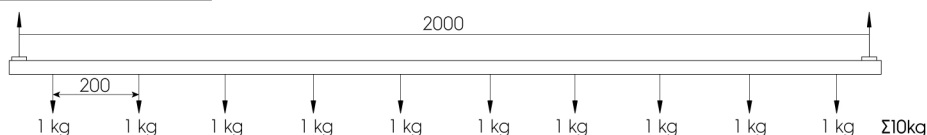

POLARITY!

1	2-3
9501-S-KL...	9501-S-KR...
9501-S-KR...	9501-S-KL...

4


9501-S-...

SEE ADAPTERS
WIRING
INSTRUCTIONS!


9501-S-...

9501-S-...



5

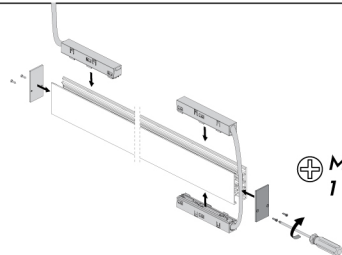



6

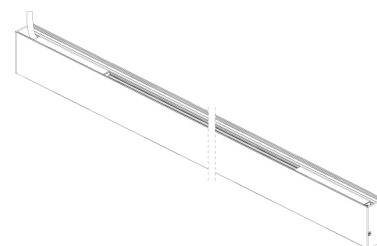


4 - 9503...

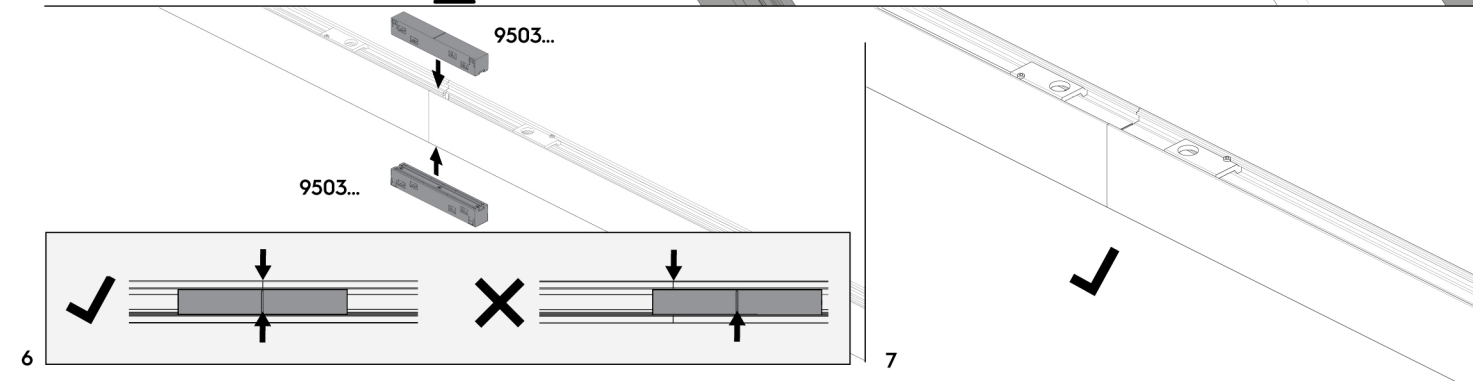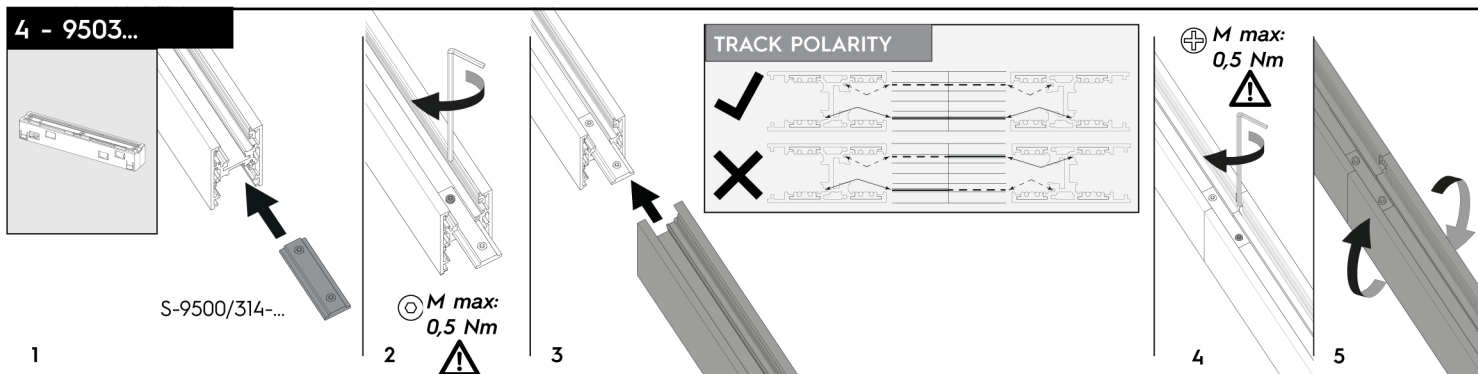

5 - CUTTING

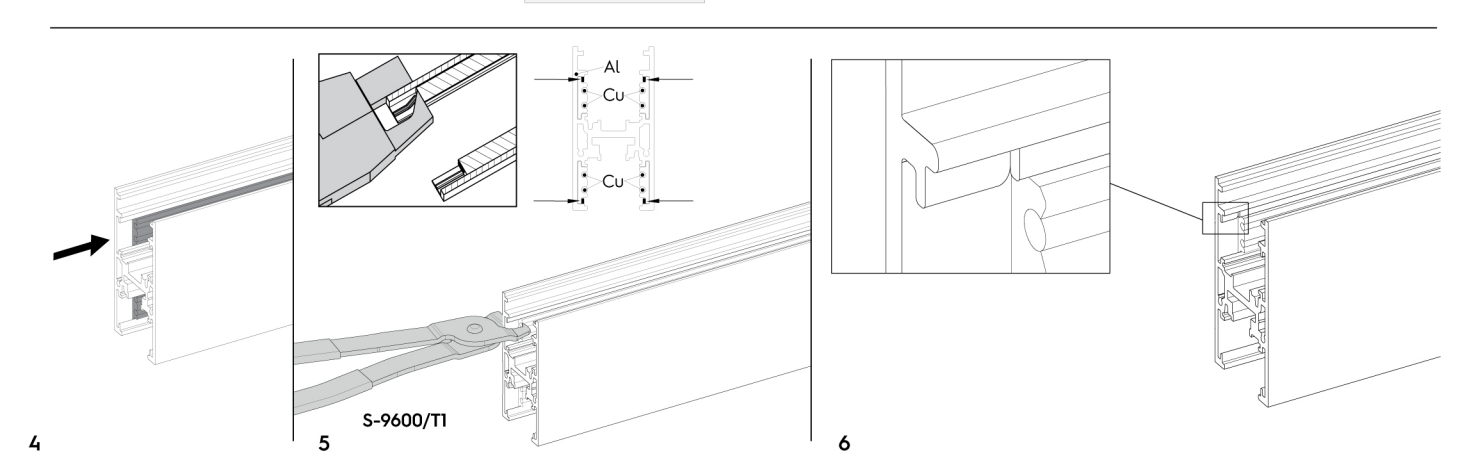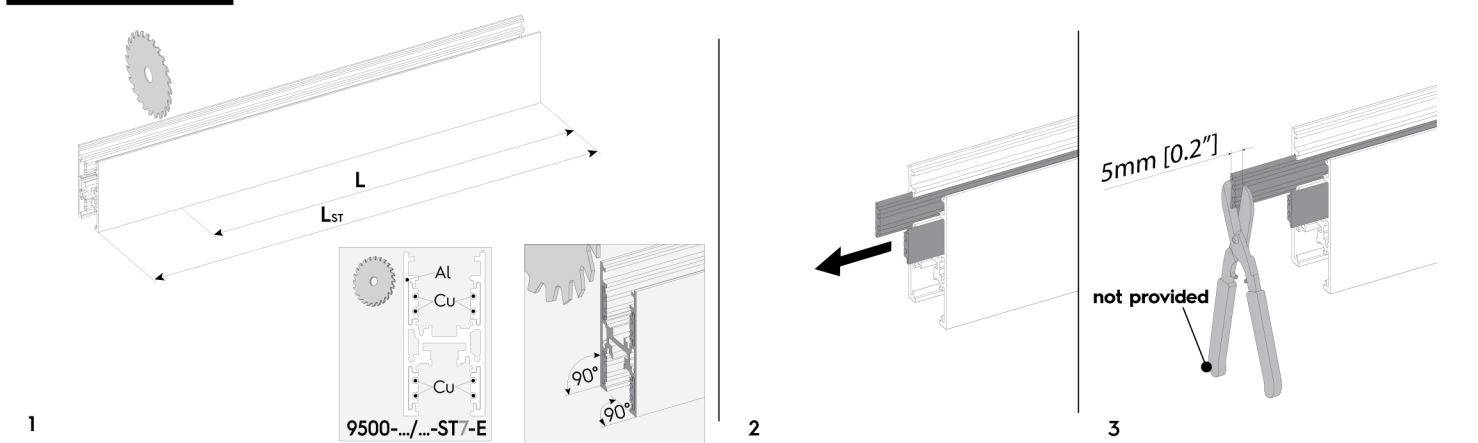


6 - 9501-S/...-E

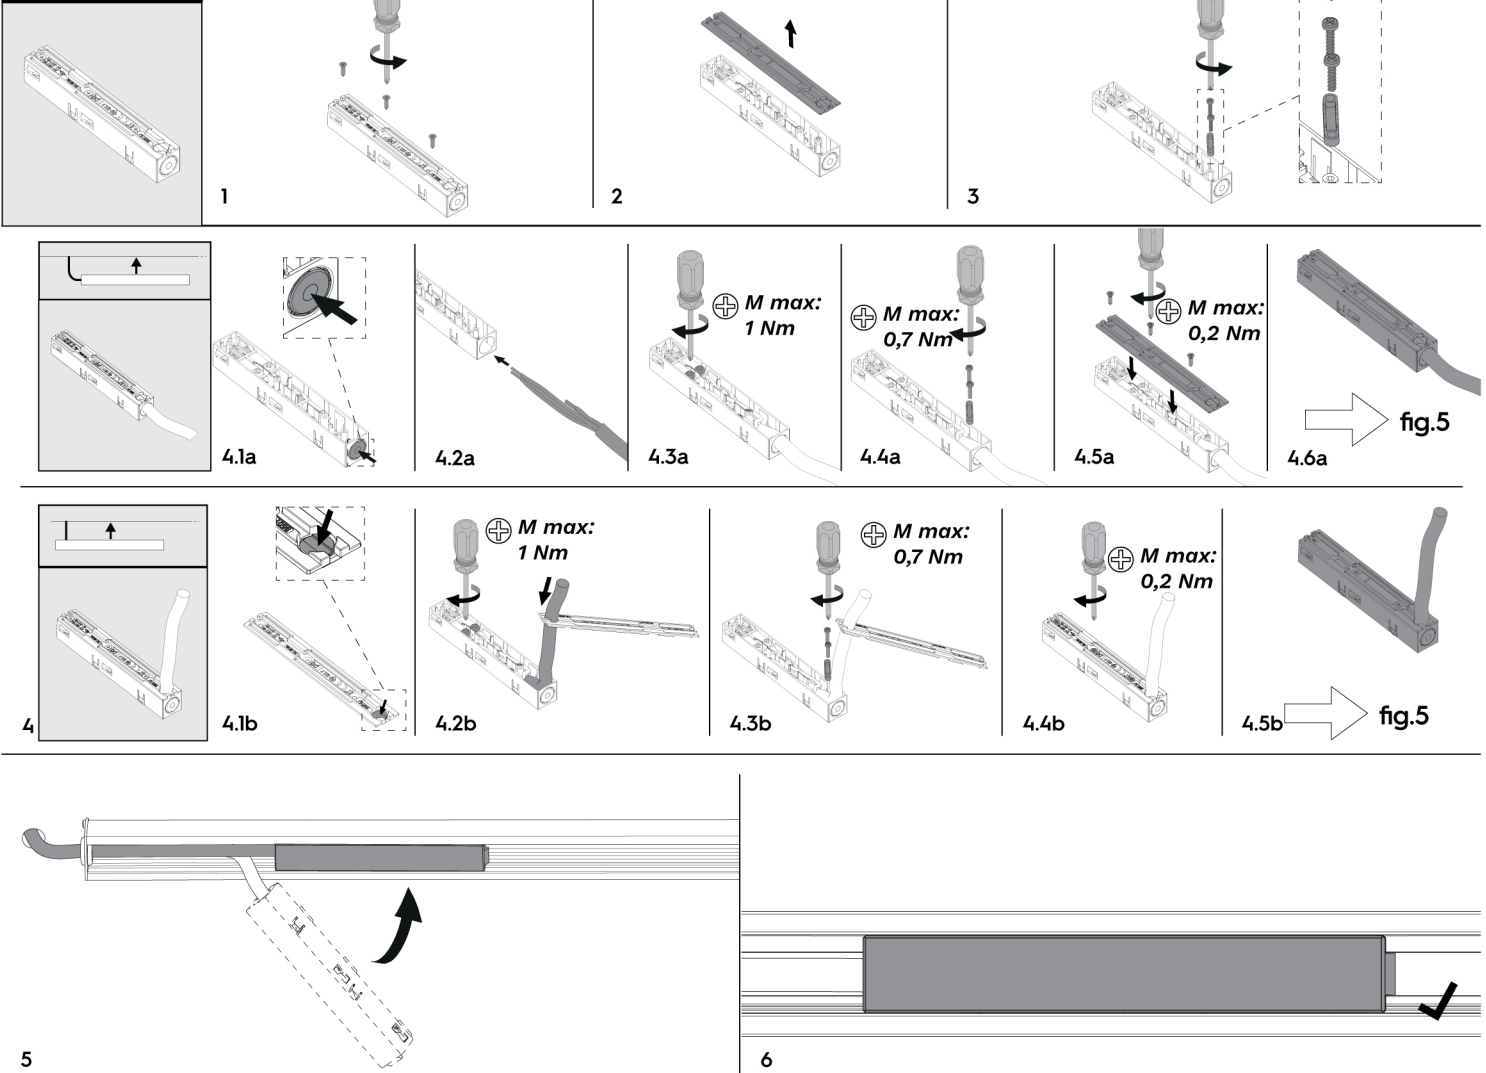


6 - S-9511/...-ST9


Polyamide joint

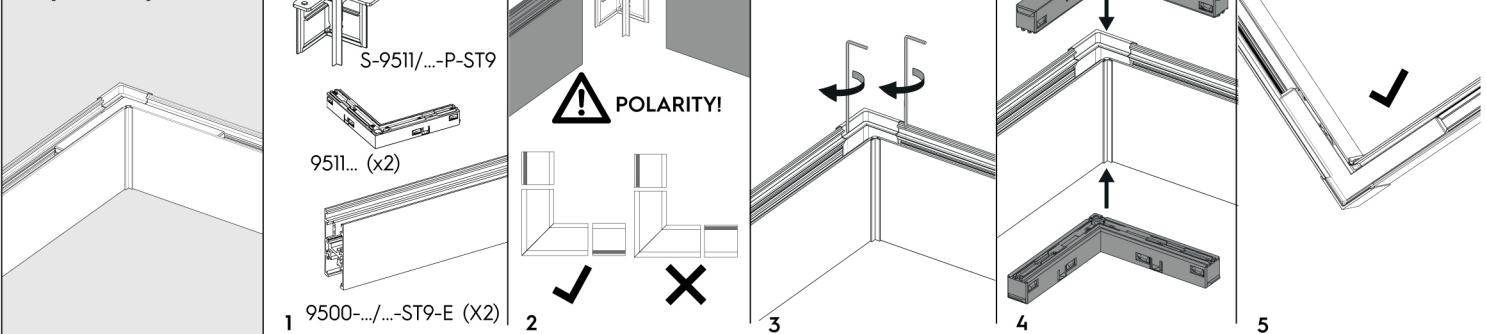


S-9511/...-P-ST9

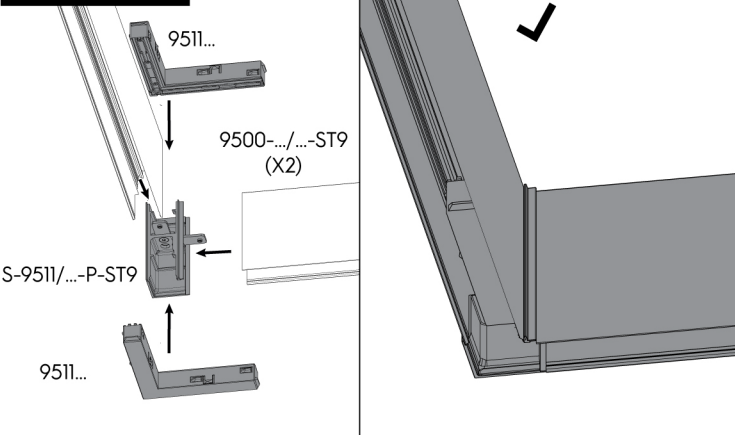


S-9513/...-P-ST9

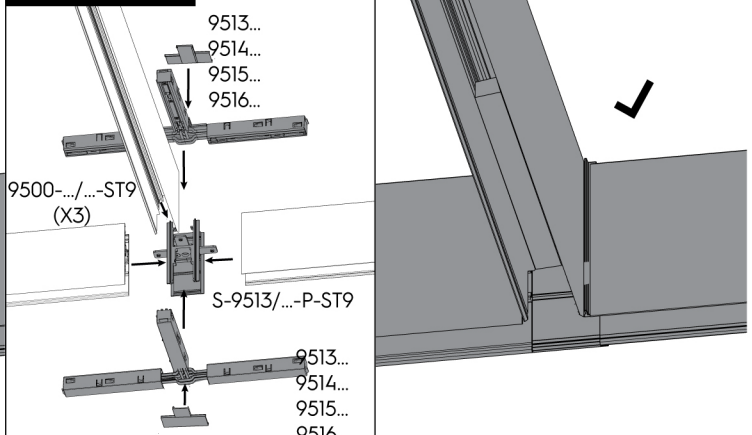


S-9517/...-P-ST9

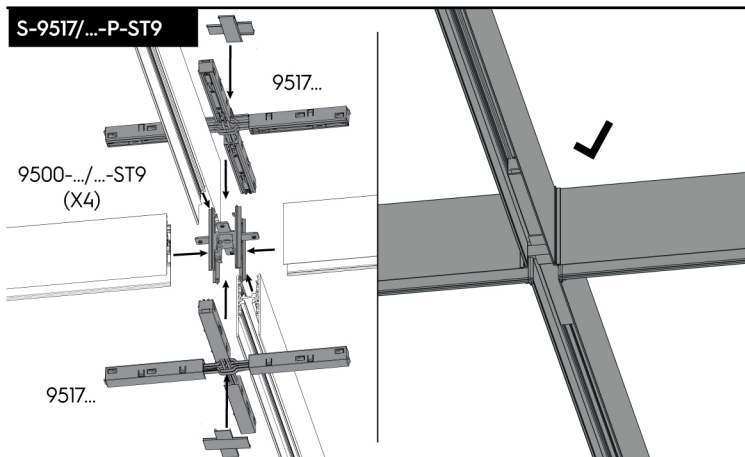



7 - 90° ANGLE

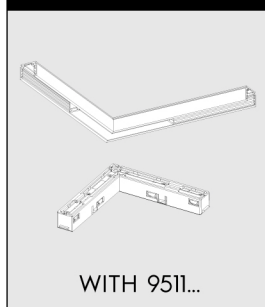


1

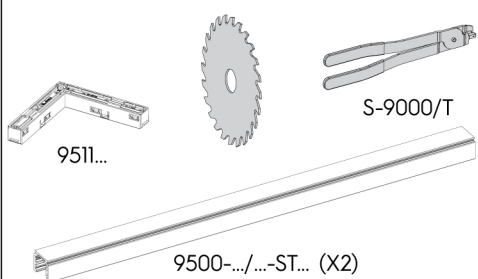


2

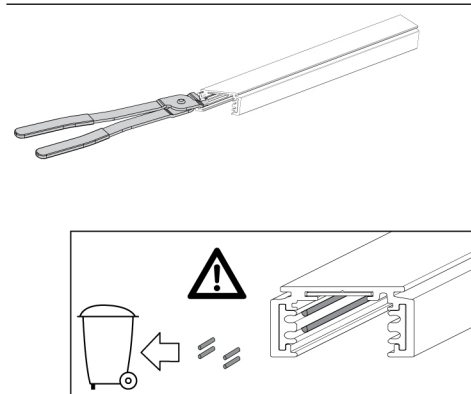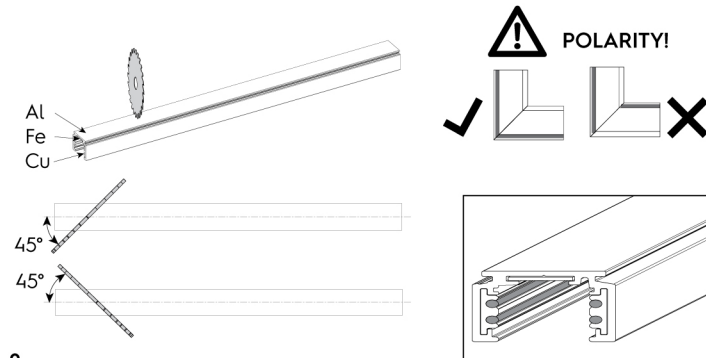

3

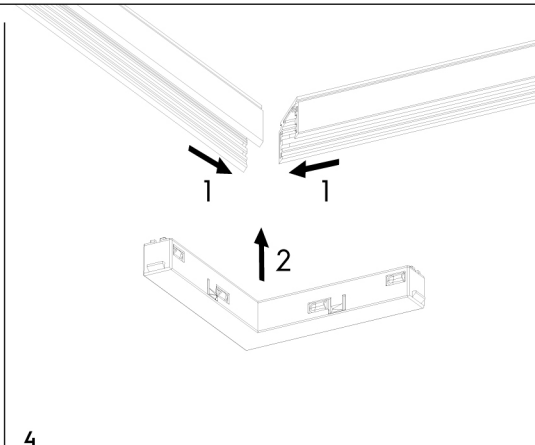


4

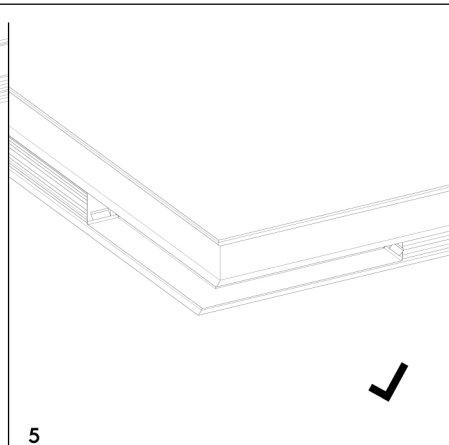


5



8 - ≠ 90° ANGLE

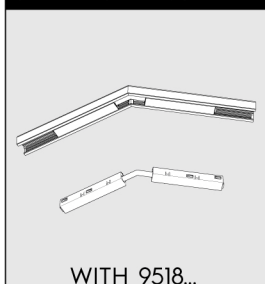


1

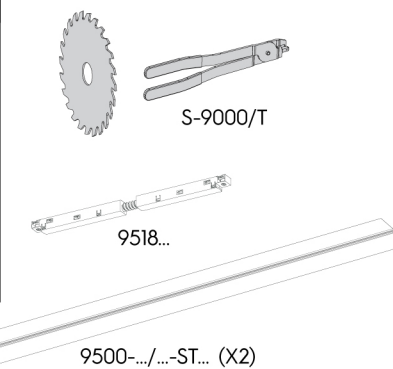


2

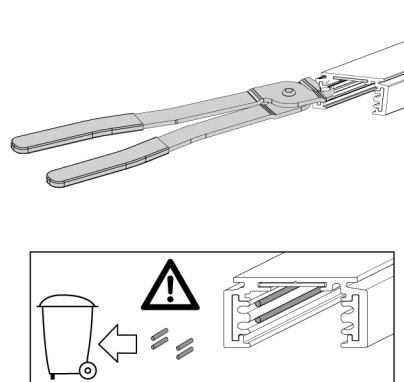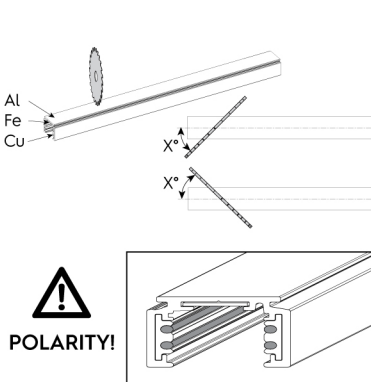

3

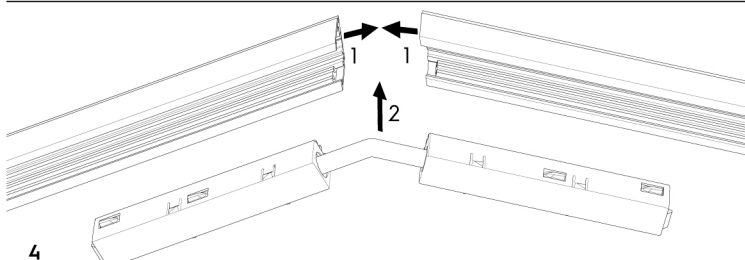

4



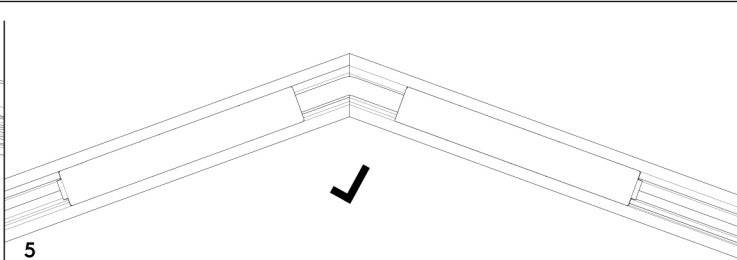


5


**9 - WALL CEILING
90° ANGLE**

WITH 9518...


1

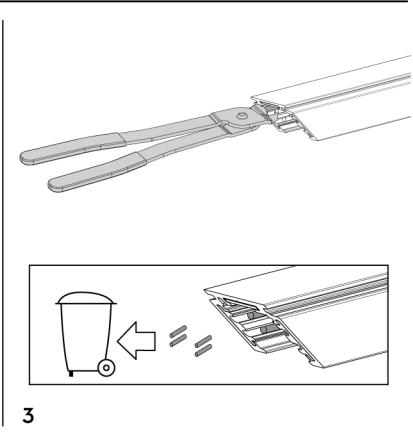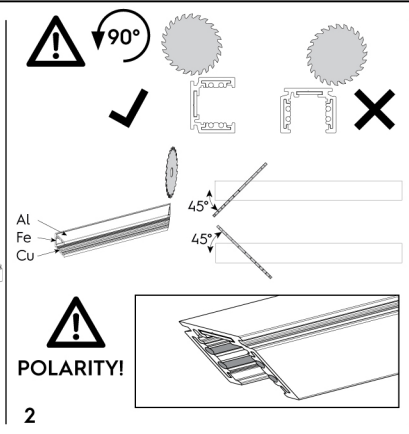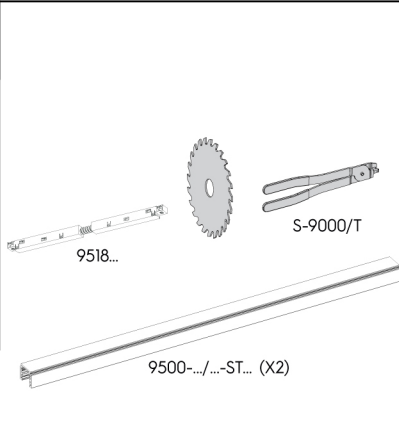

3

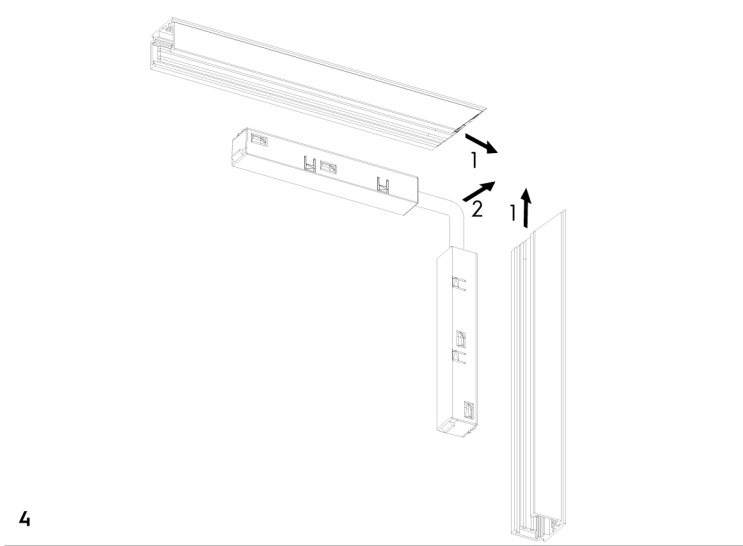

4

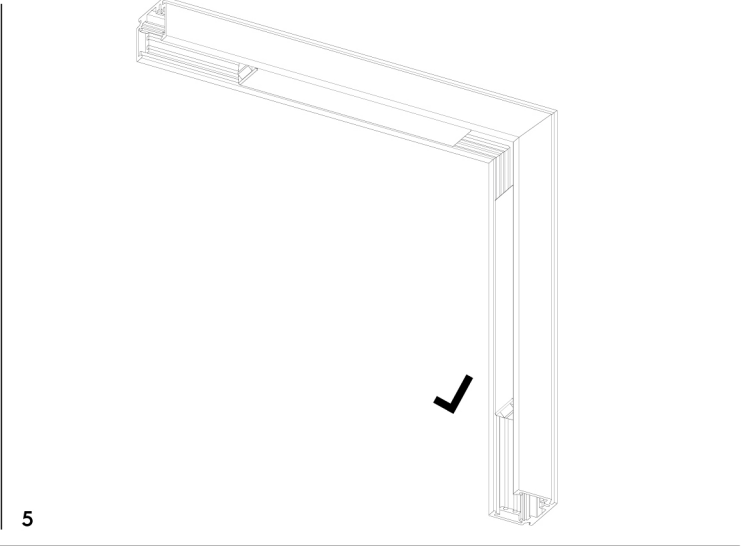

5