



Astro Guides

---

# Trimless options





# Which trimless product do I need?

## For installation **before plastering**

Use one of Astro's metal Trimless luminaires.

Metal trimless products include Borgo Trimless, Trimless downlight, and Leros. The important points to note are:

- ▶ The metal products are designed to be fitted into **plasterboard or brick/masonry** and then the surface is skimmed over with plaster covering up all the fixing flange.
- ▶ The thickness of the mounting surface is not critical as the flange of the product fixes to the outside surface and this flange is then covered in plaster.
- ▶ There is a metal edge on these products which the plasterer can skim up to and leave a clean edge.

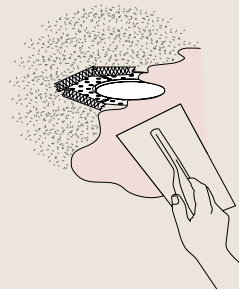
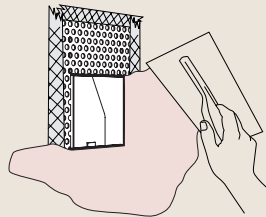


## For installation **after plastering**

Use one of Astro's plaster Trimless luminaires.

Plaster trimless products include Blanco downlights and Leros and Olympus wall lights. Important points to know are:

- ▶ The plaster products are designed to be fitted into a **plasterboard surface** that is already plastered and then the gap between the product and the surface is filled and made good.
- ▶ The product is adjusted to match the thickness of the plasterboard so that the surface is flush with the surface of the plasterboard. This is done by bending the perforated metal tabs.
- ▶ There is no edge to which you skim up to. The gap is filled and then rubbed down to a smooth finish before painting.

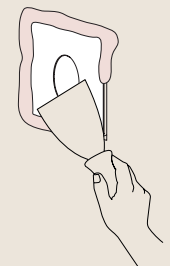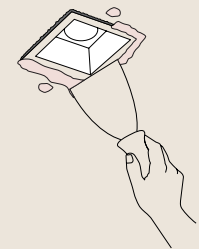



If you have any queries,  
please contact our technical  
team for further advice:  
+44 (0) 1279 427001  
[technical@astrolighting.com](mailto:technical@astrolighting.com)

---

[astrolighting.com](http://astrolighting.com)